


 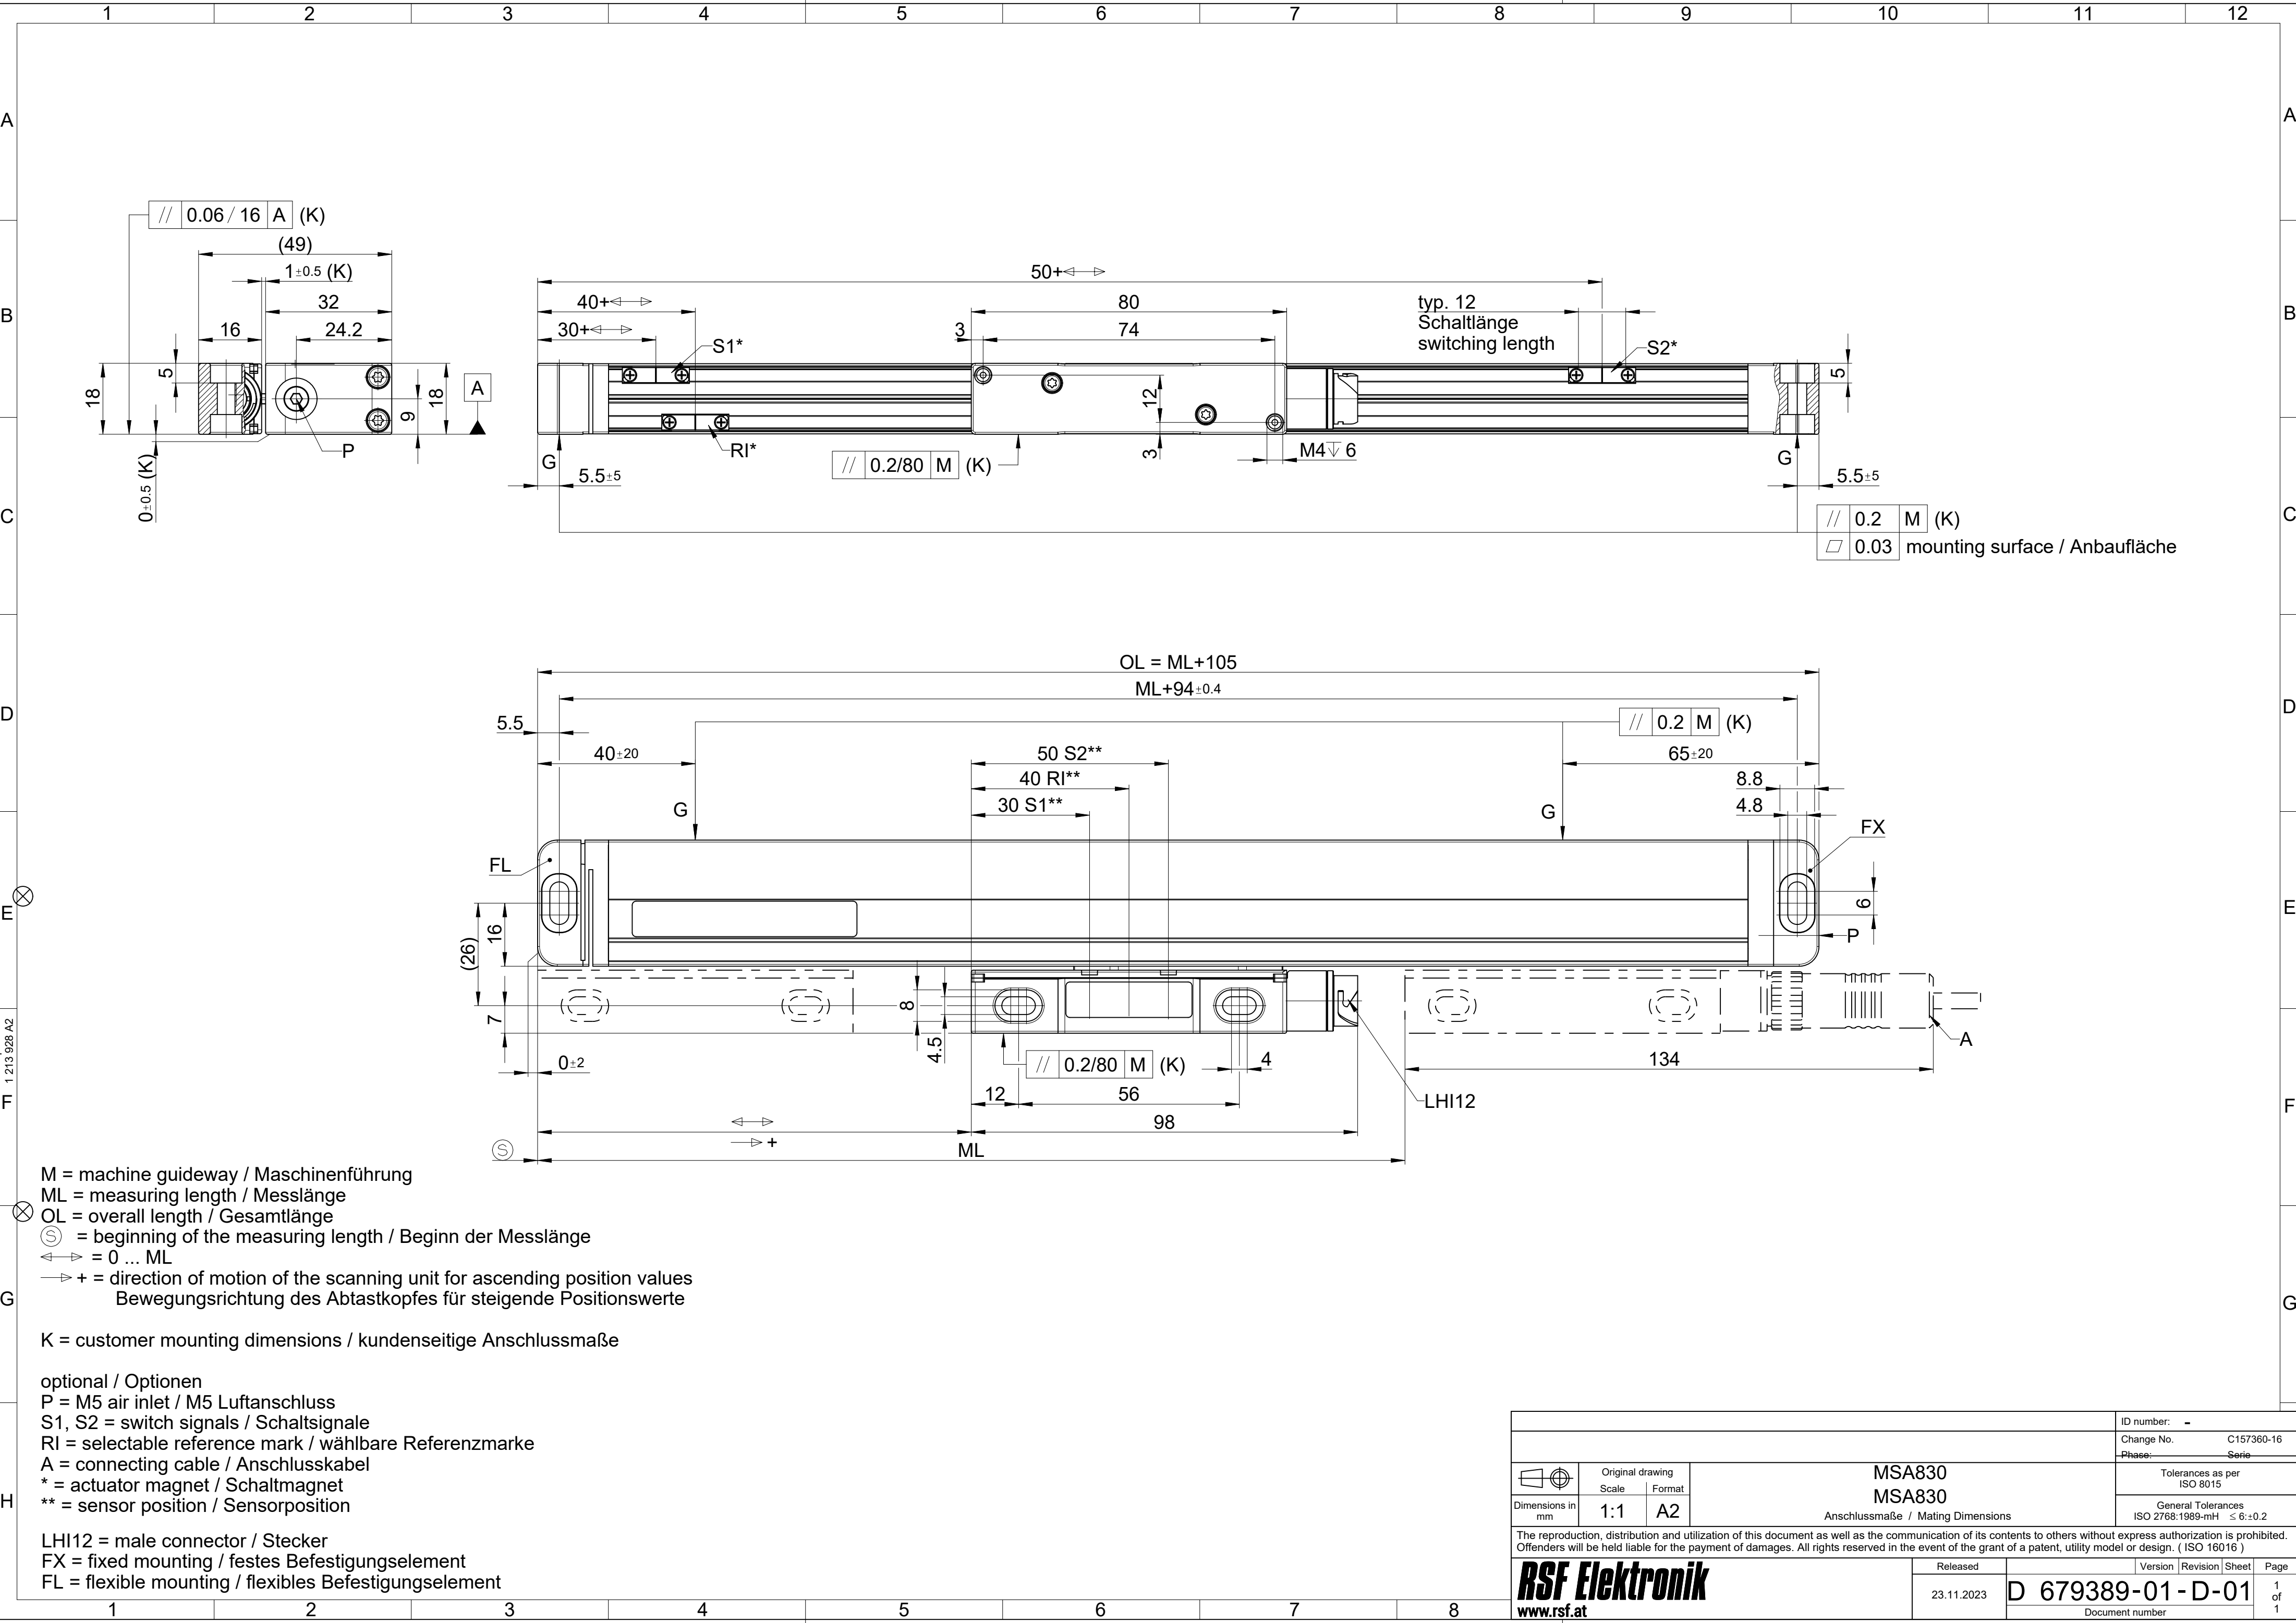


M = machine guideway / Maschinenführung
ML = measuring length / Messlänge
OL = overall length / Gesamtlänge
⊙ = beginning of the measuring length / Beginn der Messlänge
↔ = 0 ... ML
→ + = direction of motion of the scanning unit for ascending position values
Bewegungsrichtung des Abtastkopfes für steigende Positionswerte

K = customer mounting dimensions / kundenseitige Anschlussmaße

optional / Optionen
P = M5 air inlet / M5 Luftanschluss
S1, S2 = switch signals / Schaltsignale
RI = selectable reference mark / wählbare Referenzmarke
A = connecting cable / Anschlusskabel
* = actuator magnet / Schaltmagnet
** = sensor position / Sensorposition

LHI12 = male connector / Stecker
FX = fixed mounting / festes Befestigungselement
FL = flexible mounting / flexibles Befestigungselement

					ID number: -							
					Change No. C157360-16							
					Phase: Serie							
		Original drawing		MSA830 MSA830								
Scale		Format										
Dimensions in mm		1:1		A2		Tolerances as per ISO 8015						
						General Tolerances ISO 2768:1989-mH ≤ 6:±0.2						
Anschlussmaße / Mating Dimensions												
The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design. (ISO 16016)												
RSF Elektronik www.rsf.at					Released		Version		Revision	Sheet	Page	
					23.11.2023		D 679389-01-D-01					1 of 1
					Document number							